

## Auto Power ON Mode Setting

The AUTO POWER ON MODE is a convenient way to start up the projector without pressing the POWER button. You can turn the projector on and off by supplying AC power to the projector. To do this, proceed as follows:

- ① Press the ADJUST button to display the "ADJUST" menu.
  - The projector may ask you to enter your passcode.
  - See page 3-44 for the explanation of the PASSCODE.
  
- ② Use the CURSOR  $\Delta$  or  $\nabla$  button to highlight the "9/OPTION" line. Press the ENTER button to display the "OPTION" menu. You can also select the "OPTION" menu directly by pressing the INPUT "9" button.
  
- ③ Use the CURSOR  $\Delta$  or  $\nabla$  button to highlight the "1/SETTING MODE" line. Press the ENTER button to display the "SETTING MODE" menu. You can also select the "SETTING MODE" menu directly by pressing the INPUT "1" button.
  
- ④ Use the CURSOR  $\Delta$  or  $\nabla$  button to select the "AUTO POWER ON MODE" line. Press the ENTER button to display the "AUTO POWER ON MODE" menu.

```

- ADJUST -
1 / SIGNAL ENTRY
2 / FOCUS
3 / ALIGNMENT
4 / CONVERGENCE
5 / WHITE BAL
6 / R,G,B GAIN
7 / HOUR METER
8 / PASSCODE
9 / OPTION
    
```

```

- OPTION -
1 / SETTING MODE
2 / MENU MODE
3 / SEQUENCER
4 / PJ ADDRESS
    
```

| OPTION               | -SETTING MODE-                         |
|----------------------|--|
| CONNECT CONDITION    | STANDALONE<br>SW 1 LEVEL<br>SW 2 LEVEL |
| AUTO POWER ON MODE   | INACTIVE<br>ACTIVE                     |
| DEFAULT INPUT SELECT | LAST<br>DEFAULT                        |
| POINT CONVERGENCE    | ENABLE<br>DISABLE                      |
| VIDEO MODE SELECT    | AUTO<br>MANUAL                         |


Continued on the next page.

## SETTING

- ⑤ Use the CURSOR  or  button to select either "ACTIVE" or "INACTIVE" and press the ENTER button to execute it.

### Items to select

- INACTIVE --- Normal operation setting. Power ON is accomplished through the rear panel or the POWER button on the remote control.
- ACTIVE ----- Bypasses rear panel power button ( or the POWER button on the remote control) to allow power ON to be controlled switched outlet.

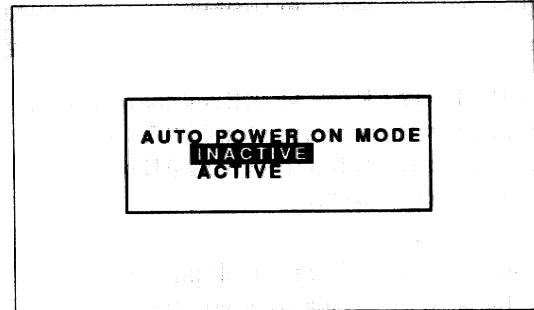

- ⑥ To complete, press the END button.
- Whenever the END button is pressed, the screen will be changed in this order:  
"OPTION" menu → "ADJUST" menu → Source screen
  - If the "RETURN USER MODE ?" menu appears, use the CURSOR  or  button to select either "YES" or "NO" and then press the ENTER button.

### Items to select

- YES ---- When you try to enter the ADJUST mode the next time, you will need to enter your passcode.
- NO ----- When you try to enter the ADJUST mode the next time, you will not need to enter your passcode.

